 


US



Model:226472TR

HUMIDIFIER

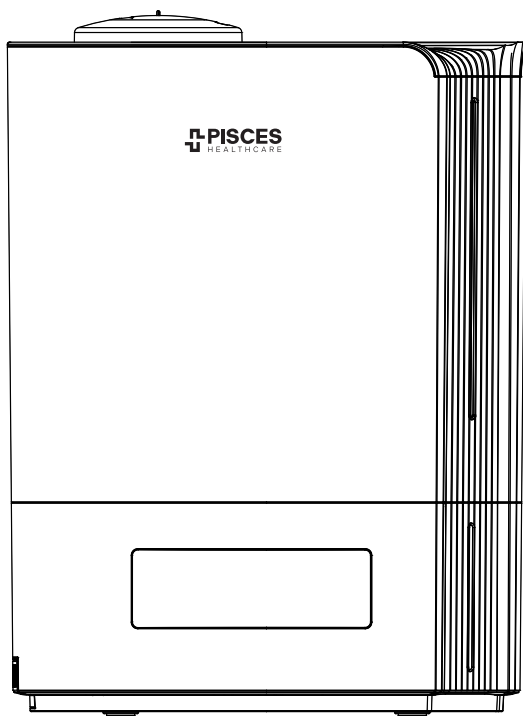

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

This owner's guide and any additional inserts are considered part of the product. They contain important information about safety, use and disposal. Before using the product, please familiarize yourself with all operating and safety instructions. Please keep all documents for future reference and pass these documents on together with the product, to any future owner. See our website to view, download and print the most current version of this owner's guide.

INTENDED USE: This product is intended to humidify and circulate the air in indoor living spaces. This product is not intended for commercial or industrial use. The manufacturer assumes no responsibility for damage or injury due to unauthorized use or product modification. Failure to follow these directions will void the product warranty.

WARNING: Risk to Children and Impaired Persons

- Supervision is required during the installation, operation, cleaning and maintenance of this product by children age 12 and younger and anyone with reduced physical, sensory or mental capabilities. Children should be supervised to ensure that they do not play with the appliance, its parts and packaging material.

INSTALLATION WARNING-TO reduce risk of fire, electrical shock and injury to persons, observe the following:

- No part of this product (the appliance, power cord, plug, packaging, etc.) should be placed near furnaces, fireplaces, stoves or other high temperature heat sources. Do not use in a window, on an uneven or unstable surface, or near water.
- The appliance, power supply, power cord and plug cannot come into contact with water. Do not use this product on wet surfaces. Do not use this product in a bathtub or shower or position product where it may fall into a bathtub, laundry, swimming pool or other water container. Do not use this product outdoors or expose it to weather or elements.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over. The cord should not hang over edges of counters or be placed where it can be crimped or closed in doors. Place appliance near an easily accessible outlet so the product can be unplugged quickly during an emergency.

SAFE USE WARNING-TO reduce risk of fire, electrical shock and injury to persons, observe the following:

- **WARNING:** To reduce likelihood of circuit overload, fire and electric shock, do not operate with a solid state speed device, such as a dimmer control switch.

READ AND SAVE THESE INSTRUCTIONS

- Do not operate unit if the unit has been dropped or damaged. Do not use this product if it has a damaged power cord or plug. To avoid risk of electrical shock, do not attempt to repair or replace parts. Only original replacement parts may be used. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Risk of fire, Your appliance may be equipped with a detachable power supply or a cord/plug with a safety device such as a fuse. Use only the power cord and plug provided.
- Before plugging power cord into electrical outlet, be sure that all electrical information on the rating label, including voltage, is compatible with your outlet's power supply.
- Never use the cord as a handle or otherwise yank, strain or stretch the power cord.
- While the product is plugged in, do not insert or allow foreign objects to enter any input or output opening as this may cause risk of electric shock or fire, or damage the product.
- A loose fit between wall outlet(receptacle)and plug may cause overheating and distortion of the plug. Discontinue use of the product in this outlet. Contact a qualified electrician to replace loose or worn outlets.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Before filling with water, moving, repositioning, servicing, cleaning and when not in use, use the product controls to turn off the power and then unplug. To disconnect from outlet, grasp and pull only the plug. Also power off and unplug if the product will be left unattended for an extended period of time or during electrical storms.
- Electric shock can occur when liquid comes in contact with electricity. Be careful when removing the water tank and refilling to avoid electric shock. Do not pour water through the top Outlet Air Grille on the power head.
- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.

READ AND SAVE THESE INSTRUCTIONS

- Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down. If the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
- Unplug the appliance during filling and cleaning.
- Never leave water in the reservoir when the appliance is not in use.
- Empty and clean the humidifier before storage. Clean the humidifier before next use.

SERVICING WARNING-TO reduce risk of fire, electrical shock and injury to persons, observe the following

 
- **WARNING:** Wash hands and avoid touching eyes after handling the wick(filter).
- Clean your product regularly, only as is instructed in this manual. Prior to cleaning, turn off the power on your product and unplug. Do not use gasoline, thinners, solvents or other chemicals for cleaning. Refer to the CLEANING AND MAINTENANCE instructions provided.
- Do not open appliance housing while product is plugged in. To avoid risk of shock, all service and/or repairs must be done by a Authorized Service Center.
- protect against the growth of mold, mildew and other microorganisms by emptying the water tank immediately after each use. If water is left in the tank for longer than 8 hours, thoroughly clean and disinfect the unit as described in the section of this Owner's Guide referenced as "CLEANING AND MAINTENANCE"

DISPOSAL WARNING

To reduce waste and environmental harm, observe the following:

- **PACKAGE RECYCLING:** The packaging protects the appliance from transport damage. The packaging materials are selected from the point of view of their environmental friendliness and disposal technology and are therefore recyclable. Dispose of all packaging materials in an environmentally responsible manner.

POLARIZED PLUG

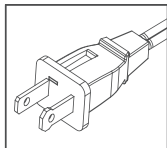

The appliance has a polarized plug(one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

READ AND SAVE THESE INSTRUCTIONS

FCC Compliance Statement

This equipment has been tested and complies with the Part 15 FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Contact Consumer Service or the dealer or an experienced radio / TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAVE THESE INSTRUCTIONS

BEFORE USING THE HUMIDIFIER

Before use, check appliance for visible damage. DO NOT USE if there is evidence of damage. If any damage is found, contact Consumer Service.

- Check for Leaks. Damage due to shipping may cause leaks in Base or Water Tank. A visual inspection may not reveal hairline fractures. Fill Water Tank with water to inspect for leaks.
- Please install the product correctly according to the instructions, otherwise it may occur electrical shock, fire, and injury to persons.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The power supply voltage must be consistent with the rated voltage of the product. If does not match, please stop using the unit and contact the dealer.

SAVE THESE INSTRUCTIONS

- DO NOT plug the humidifier if the installation is not finished.
- After receiving the humidifier, please place the unit for 30 minutes before using it to prevent the damage of water tank due to the sudden change of temperature.
- Plug the unit into a suitable socket
- DO NOT put metal products, chemicals, detergents into the sink.
- DO NOT add water into mist outlet or air outlet

 
WHEN USING THE HUMIDIFIER

- When moving the unit, please turn off, unplug and empty the water in water tank.
- Always place the unit 2m away from the wooden furniture or other appliance.
- Do NOT let water to flow into the bottom from air outlet to avoid damaging the product.
- Please always place the unit on a smooth, flat surface during using DO NOT tilt your humidifier.
- DO NOT near hair, fabrics, etc. to the machine to avoid blocking the air inlet and outlet.
- When using with household gas appliances (gas stoves, gas water heaters etc.) please keep ventilating.
- DO NOT exceed the water level while adding the water.
- Use under 5°C-40°C room temperature.
- Spills can occur during cleaning, moving or refilling the Water Tank, so be careful to avoid spills when doing these activities.
- Position humidifier to not blow directly on objects or plants. Plug power cord into standard grounded wall outlet.

AFTER USING THE HUMIDIFIER

- DO NOT unplug by pulling on the cord.
- DO NOT clean the unit or add the water while it is connected to a power source or while it is on.
- DO NOT disassemble the unit by yourself.
- Please keep the unit away from heat and direct sunlight.
- If the room temperature is below 0°, please empty the water in water tank and in sink.
- Please keep the bottom dry while cleaning.

PRODUCT DIAGRAM

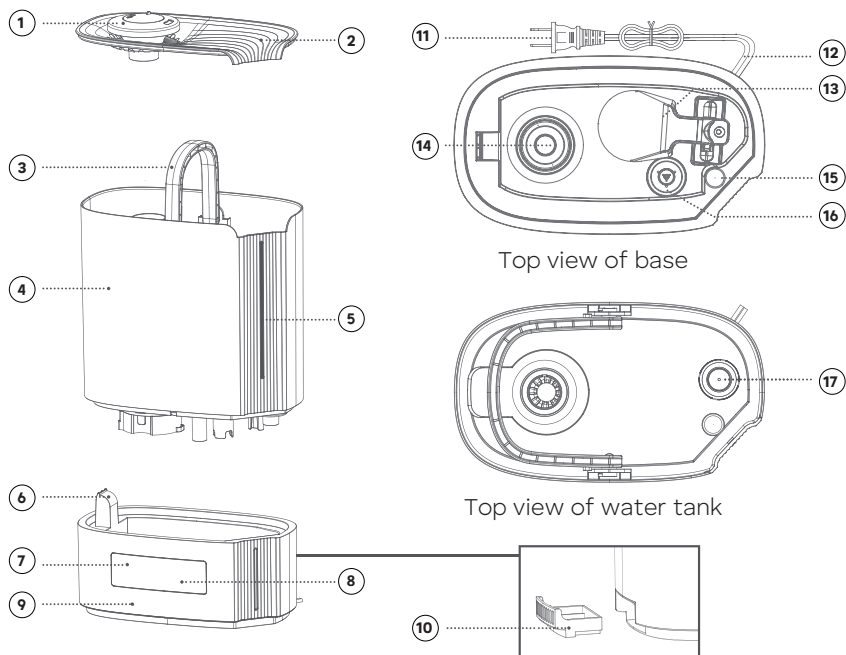

① Mist Nozzle

② Tank Cover

③ Tank Handle

④ Water Tank

⑤ Water gauge

⑥ Air Outlet

⑦ LED Display

⑧ Control Panel

⑨ Base

⑩ Aroma Slot

⑪ Power Plug

⑫ Power Cord

⑬ Floater

⑭ Atomizer Plate

 
⑮ LED Light

⑯ Water-level Sensor

⑰ Filter

Tips: DO NOT add water into the mist outlet or air outlet.

OPERATION INSTRUCTIONS

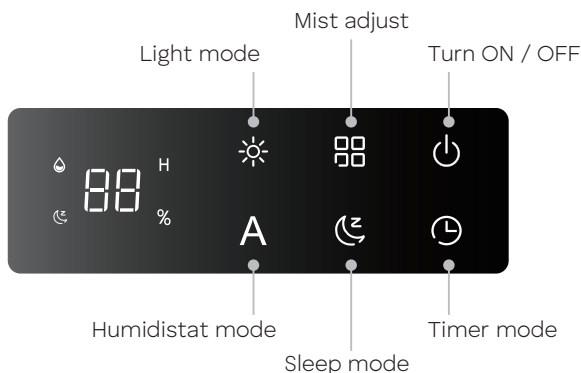

Installation

For the first use, take out the foam cotton from the broad of the base. (see pic1)

1. Add Water

- (1) Fill the tank with clean water (42-104°F) by removing the cover or directly through the groove of it.

★ Note: DO NOT add water into the nozzle!

 
★ When the humidifier is running out of water, please turn it off and unplug before refilling the water.

- (2) Remove Water Tank from the base and place on a flat surface gently, fill the tank with filtered or purified water.

ATTENTION: The water must not exceed MAX level marked in the water tank.


- (3) **Tip:** To reduce white limescale (calcium and magnesium ion powder in the water), recommend adding filtered or pure water, and cleaning the humidifier regularly.

- (4) **Tips:** It is not recommended to use bleach for cleaning, instead, it is recommended to use vinegar for soaking cleaning.

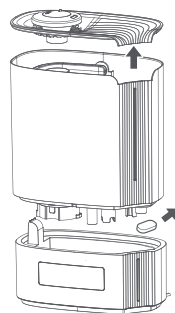

Pic.1

 Tips: Take out foam from the base before using it.

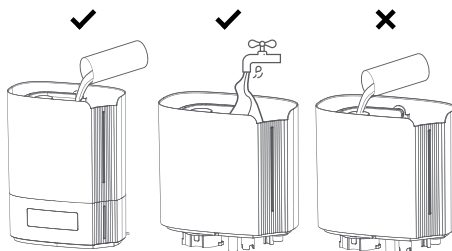

2. Turn It On

 
After plugging, the humidifier is in the 'stand-by' Mode. The digital display shows '—'

Press “  ” to turn on the humidifier after plugging in, with the mist level at High/03 and the gradient light is on. Press again to turn off.

OPERATION INSTRUCTIONS

3. Adjust Mist Level

Press “” to switch the mist level from High/03 to Low/01, then to Medium/02, and back to High/03 again. The digital displayer will show the mist level in sync.

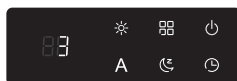


4. Adjust The Lighting

Press “” to switch the lighting status from On to Color Locked, then to Off.

5. Timer Setting

 Press “” to set the timer from 0 to 24 hours (2 hours added per tap). When time is up, the humidifier will automatically turn off. Long press “” to change the timer setting continuously.

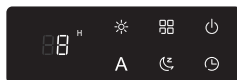


6. Auto Humidistat Mode

By pressing “”, the humidistat can be set between 55% and 90% (default is 65%, increases by 5% with each press). After each humidistat adjustment, the display will first show the set humidistat, then after 10 seconds, it will display the current environmental humidity level.

In this mode, the humidifier will automatically operate when the indoor humidity level is lower than the set value. When the indoor humidity level is higher than the set value, the humidifier will stop working automatically until the indoor humidity level is lower than the set value again.

Note:

 If want to keep the humidifier running continuously, but not adjusting to the environmental humidity level, press “” to switch the mode from Auto to manual mist adjustment mode.

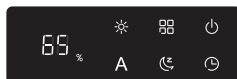

7. Sleep Mode

Press “” to enter sleep mode, with the digital displayer and LED lights off.

 


8. Short of Water

When the humidifier is short of water, it will stop working with 3 buzzes of warning and the red indicator light flashes 3 times, the “” shows on the digital displayer. Re-start it after refill the water.

Note:

When the tank is being taken out, the “” will show up. Put the tank back to restart the machine, the “” will disappear.

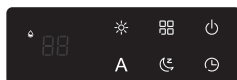

OPERATION INSTRUCTIONS

9. Memory Feature


The humidifier will record the humidity and mode setting in the last time when it was turned off with power source keeping connected. It runs as the recorded setting when turns on next time.

★After unplugged, Memory setting can be reset and back to default setting.

10. Aroma Diffuse


Add 4-5 drops of essential oils each time.

 Note: Avoid adding essential oil directly to the water, otherwise it may damage the product and cause water leakage.

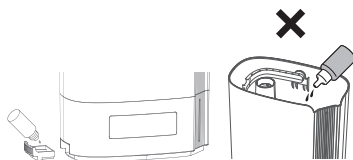

11. Filter Assembly

 1. The Filter assembly is pre-installed on the machine, which is fixed by one piece of tape. please remove the tape before using.
2. The filter assembly is one of the important components, please install according to below figure before using.
3. The filter assembly needs to be cleaned weekly. Please disassemble it and clean with water, then install it according to the instruction.

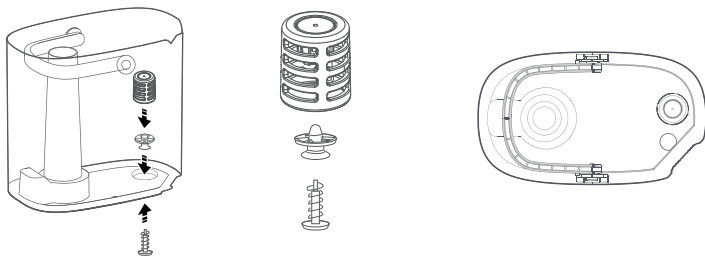

SPECIFICATION


Product Name : 226472TR	Rated Voltage : 120V~
Rated Power : 22W	Rated Frequency : 60Hz

CLEANING AND MAINTENANCE

Proper cleaning and maintenance of your Top-fill Ultrasonic Humidifier is essential to the air quality and performance of your humidifier. The frequency in which your humidifier will need to be cleaned will vary depending on use, water hardness and outside environmental factors. It is recommended, assuming average use, to thoroughly clean the unit several times throughout the season, or when algae, mineral deposits or other particles begin to form. Clean the water tank every 3 days.

CLEANING AND MAINTENANCE

 - Before cleaning, turn humidifier off and unplug
- Remove water tank from base and pour out any remaining water. please wipe with a soft cloth.
- The surface of humidifier and the water reservoir can be wiped with a clean, soft damp cloth. Keep the unit dry. Reassemble humidifier.
- To prevent the water tank from getting clogged and causing malfunction, please take out the filter (located at the bottom of the water tank) and rinse it under the faucet. Wipe away dirt from the filter with a cloth, and ensure to clean it at least once a week.

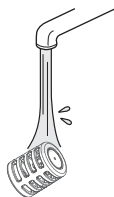

ATTENTION: Micro-organisms that may be present in the water or in the environment where the appliance is used or stored, can grow in the water reservoir and be blown in the air causing very serious health risks when the water is not renewed and the tank is not cleaned properly every 3 days

ATTENTION: Empty the tank and refill every third day. Before refilling, clean it with fresh tap water or cleaning agents if required by the manufacturer. Remove any scale, deposits, or film that has formed on the sides of the tank or on interior surfaces, and wipe all surfaces dry

ATTENTION: if humidifier is not cleaned as recommended, you may experience some growth of algae or bacteria. These microorganisms may become airborne.

Note: On occasion the Water Tank may need to be wiped down or cleaned to remove build-up of impurities with a mild detergent and cool water.

ATTENTION: Do not use gasoline, thinners, solvents or other chemicals for cleaning. The unit may not produce mist at low gear if there is too much dirt in the water reservoir. After cleaning the dirt, you can use it normally. Please do not let water flow into the air outlet during cleaning to avoid damaging your humidifier.

ATTENTION: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

STORAGE

During the off-season or after extended periods of non-use, you may choose to store your humidifier. To ensure long life of the product, it is recommended to store your humidifier by following these instructions:

- Cleaning is recommended before storage
- Unplug power cord and bundle loosely.
- Let humidifier dry completely before storing. Do not store with water inside Water Tank
- Cover, or place back in retail carton if available. This will prevent humidifier from accumulating dust over time.
- Store humidifier in cool and dry location

CLEANING AND MAINTENANCE

TIPS

Be aware of several things as your Top-fill Ultrasonic Humidifier operates:

- If you operate your humidifier continuously (which is recommended to maintain humidity all day), it may need to be refilled with water every day. Check the Water Tank to be certain that there is an adequate water supply for operation.
- Allow for optimum airflow by keeping the Air Outlet unobstructed. Ensure curtains and other items are far enough away from the unit to not be pulled into the side inlets or interfere with airflow.
- Any additives, such as aroma fragrances or water conditioners, must not be used. These additives can cause cracks in the plastic of the humidifier and may affect performance. Any use of such additives voids the manufacturer's warranty.

problem	possible cause	solution
Stops working after a period of use and the red light flashes.	The filter(located at the bottom of the water tank) hasn't been cleaned for a long time, causing limescale to clog the filter.	Take out the filter cover and rinse it under the faucet, wipe away the dirt from the filter with a cloth, and clean it at least once a week.
Stop working during normal use.	The humidifier is in Auto Humidistat Mode, and the environmental humidity level is higher than the set value.	Wait until the environmental humidity level is lower than the set value, the humidifier will operate automatically again, or switch to Manual Mode.
Unit fails to power on.	Unit is not plugged in.	Plug power cord into electrical outlet.
	Household circuit breaker/ground fault circuit interrupter has tripped or blown fuse.	Reset circuit breaker/ground fault circuit interrupter or replace fuse.
	Unit is damaged or in need of repair.	Contact our customer service for replacement.
	Cease usage and unplug.	Ensure power head is securely in place for proper power connection. Contact Consumer Service for assistance.
Unit makes bubbling or gurgling sound.	This is normal, water is being dispensed into base.	
Unit is not producing desired amount of humidity	Unit settings are too low.	Set to High Fan Speed and Continuous Humidity for maximum humidity out.

CLEANING AND MAINTENANCE

problem	possible cause	solution
Unit is not producing desired amount of humidity	Water level in Tank is empty or too low.	Refill with clean, cool tap water. See HOW TO USE for instructions.
	Airflow is blocked.	Remove obstruction.
Water is leaking from the machine.	Adding essential oils directly to water leads to product damage.	Please add essential oil to the essential oil tray. Contact us if leakage is severe.
	The sponge hasn't been removed, or something is stuck in the float inside the base.	Remove the sponge or thing that stuck in the float.
	Dirt is stuck in the drain valve of the water tank.	Clean the dirt around the drain valve to ensure the valve can close properly.
	Accidentally pour water into the mist outlet when adding water.	Avoid adding water to the mist outlet.
	Tried above way and leakage problem still cannot solve.	Contact us for a resend or refund.
Leaves white residue or white dust.	The white residue comes from minerals in the water.	Use distilled water or purchase additional demineralization cartridge for humidifier.

WARRANTY

We appreciate your feedback and will do our best to guarantee your satisfaction.

Within 1 year after your purchase, shall the product has defects, we will provide a refund or resend you a new one. Please email us with your order number or contact the seller. Your inquiries will be taken care of as soon as possible.

This warranty does not cover normal wear of product and damage caused by misoperation of buyers.

This warranty only cover orders from authorized TRUE 42 and our official website. We are not responsible for any purchases from other distribution channels.