

QUICK START GUIDE

(Keep this for future reference)




Quick Start Guide

Before Use


When using for the first time, remove wraps and follow the steps below:

1

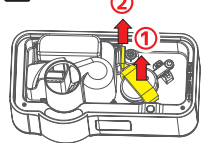


①Remove the white foam ring from the float.

2

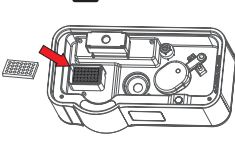

Locate the insulation sponge inside the manual bag. Place the sponge into the heating element of the base.


3

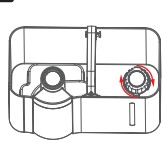

Properly install the filter sponge and turn the filter clockwise to tighten.

Recommend to use filtered/distilled water for your health and avoid the formation of limescale.

4

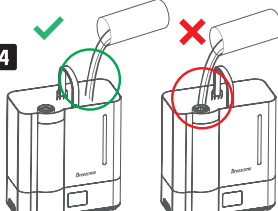

Fill the water tank with water. Keep water away from the mist outlet to prevent leakage.

5



Avoid adding essential oil directly into the water, it should be added to the essential oil tray.

Trouble Shooting


Problem	Possible cause	Solution
Stop working after a period of use and the red light flashes.	The filter(located at the bottom of the water tank) hasn't been cleaned for a long time,causing limescale to clog the filter.	Remove filter and restart. Note: For maintenance, we recommend weekly cleaning by soaking the filter in vinegar to remove limescale.
Stop working during normal use.	It is in Auto Humidistat Mode, and the environmental humidity is higher than the set value.	It will restart automatically when humidity drops below the set value, or you can switch to Manual Mode.
Water is leaking from the machine.	Adding essential oils directly to water leads to product damage and water leakage.	Please add essential oil to the essential oil tray. Contact us if leakage is severe.
	The sponge hasn't been removed, or something is stuck in the float inside the base.	Remove the sponge or something else that stuck in the float.
	Dirt is stuck in the drain valve of the water tank.	Refer to cleaning guide. Clean the dirt around the drain valve to ensure the valve can close properly.
	Accidentally pour water into the mist outlet when adding water.	Avoid adding water into the mist outlet.
Leaves white residue or white dust.	The white residue comes from minerals in the water.	Tryed above ways and leakage problem still cannot solve.
		Contact us for a resend or refund.
The screen displays E1-E5 error message	The white residue comes from minerals in the water.	Use distilled water or purchase additional demineralization cartridge for humidifier.
	Refer to the trouble shooting guide in the user guide	Contact customer support for assistance.

Cleaning Guide

▲ CAUTION: ALWAYS TURN OFF AND UNPLUG THE HUMIDIFIER BEFORE ANY CLEANING OR MAINTENANCE.


Cleaning of Water Tank&Drain Valve

1

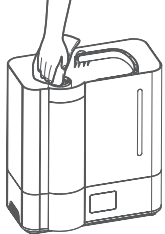


Rinse the tank, then wipe with a lint-free cloth. Soak in vinegar for 10 minutes if heavily scaled.

2

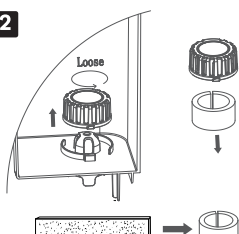


To prevent clogging, remove the filter cover by rotating it counterclockwise, then take out and thoroughly rinse the sponge to remove any scale.

3

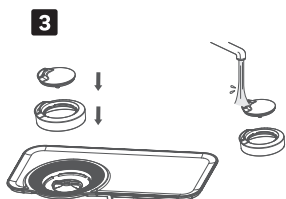

Remove the mist nozzles on the water tank lid and clean both the large and small mist nozzles with clean water.


4

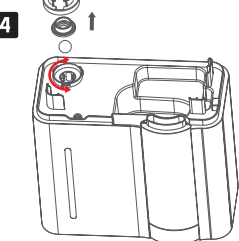

With the tank upside down, remove the drain valve by turning the knob counterclockwise, then clean the sealing ring and stainless steel ball.


Cleaning of the Base and Atomizer

1

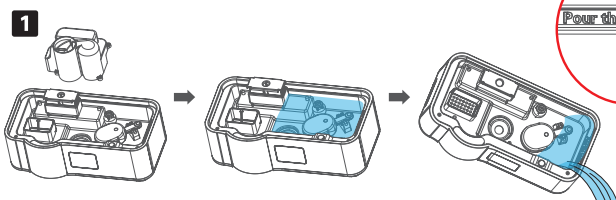


Clean base: Remove silencer → Soak with vinegar (10 min) → Wipe → Rinse by filling/pouring water (2-3x). No faucet rinsing.

2

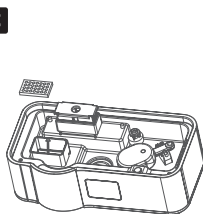

Remove the insulation sponge from the top of the heating element. Clean the pads under running water.Warning: To avoid burns, perform this only when the machine is completely cool.

3

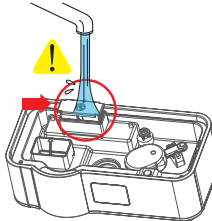

Not to do
Be careful not to spill water into the air outlet on the base to prevent any damage to the machine

Important Notes

- (1) Clean the water tank and valve every 3 days (72h) of use to ensure a good water quality!
- (2) Use vinegar instead of bleach for soaking cleaning.
- (3) Do NOT use anything hard (eg. steel brush) to clean the silicone valve that might cause damage/leak.

CONTROL AND FUNCTION



On/Off Button

Tap to turn the humidifier on/off



Ambient Light Button

The light color indicates the operating mode. Long press to activate the 7-color light. Touch to turn the indicator light off.



Timer Button

Tap to activate the timer function. Press and hold to continuously adjust the timer. (Refer to the operating logic.)



Sleep Button

Press to enter sleep mode. The machine will turn off lights and operate at low mist.



Auto Mode Button

Press to activate the constant humidity function.



Cool Mist Button

Activates the cool mist humidification function, with 3 levels available.



Child Lock Button

Long press for 3 seconds to lock. Long press for 3 seconds to unlock.



Heating Button

Activates the heating function, with 3 levels available.

物料名称： DH-JS16 提示卡纸

物料编码：

材 质： 200克铜版纸

尺 寸： 210x142mm

工 艺： 过哑膜/折页4p

印刷颜色： 四色印刷

单 位： mm

比 例： 1:1

公 差： ±1

制作要求： 1.请严格按照图纸尺寸/图案位置进行印刷；

2.送样板或送大货时，请务必确保成品不得出现色差、漏印、叠影等不良情况；

3.所有材料必须过RoHS环保认证。

版 本： A0

变更内容： A1 更改xxx

A2 更改xxx

平面设计： 骆美华

日 期： 2026-4-28

刀 线： ——

压 线： - - - - -

DOUHE 斗禾