


US

PISCES
HEALTHCARE

226473TR

HUMIDIFIER

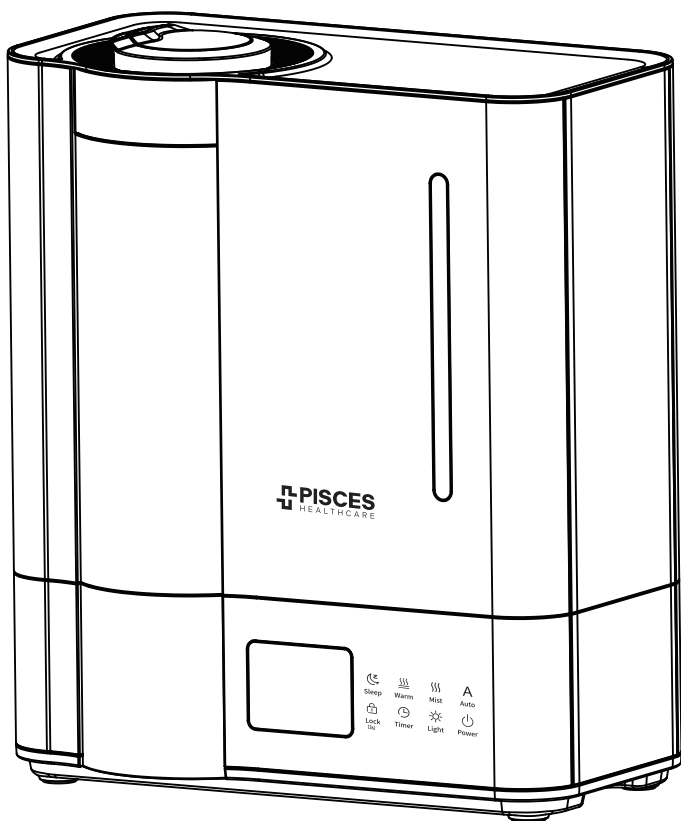

READ AND SAVE THESE INSTRUCTIONS

01

IMPORTANT SAFETY
INSTRUCTIONS

1

02

SPECIFICATIONS

5

03

KNOWING YOUR
HUMIDIFIER

5

04

CLEANING AND
MAINTENANCE

12

05

TROUBLESHOOTING

15

06

BREEZOME CUSTOMER
CARE

17

READ AND SAVE THESE INSTRUCTIONS

Portable Safety Instructions

- This owner's guide and any additional inserts are considered part of the product. They contain important information about safety, usage, and disposal. Familiarize yourself with all operating and safety instructions before using this product. Keep all documentation for future reference and pass these documents along with the product to any future owners. Refer to our website to view, download, and print the latest version of this owner's guide.
- **Intended Use:** This product is intended to humidify and circulate air in indoor living spaces. It is not intended for commercial or industrial use. The manufacturer assumes no responsibility for damage or injury caused by unauthorized use or product modification. Failure to follow these instructions will void the product warranty.

Warning: Risk to Children and Vulnerable Individuals

Children 12 years old and younger, as well as individuals with reduced physical, sensory, or mental capabilities, require supervision during the installation, operation, cleaning, and maintenance of this product. Ensure that children do not play with the appliance, its components, and packaging materials.

Installation Warning

To reduce the risk of fire, electric shock, and personal injury, please adhere to the following guidelines:

- **CAUTION:** RISK OF ELECTRIC SHOCK. DISCONNECT THE APPLIANCE FROM THE ELECTRIC SUPPLY BEFORE REMOVING THIS COVER
- Any part of this product (electrical components, power cord, plug, packaging, etc.) should not be placed near stoves, fireplaces, ovens, or other high-temperature heat sources. It should not be used near windows, on uneven or unstable surfaces, or near water.
- Electrical appliances, power sources, power cords, and plugs must not come into contact with water. Do not use this product on damp surfaces. Do not use this product in the bathtub, shower, or place it where it might fall into the bathtub, laundry, swimming pool, or other water containers. Do not use this product outdoors or expose it to weather or harsh environments. Do not run cords under carpets. Do not cover cords with rugs, runners, or similar coverings, and do not run cords under furniture or appliances. Arrange

- similar coverings, and do not run cords under furniture or appliances. Arrange cords away from traffic areas where they won't be tripped over. Cords should not hang over the edge of counters or be placed where they can be pinched or closed. Place appliances near convenient outlets to allow for quick unplugging in case of an emergency.

Safety Use Warning

To reduce the risk of fire, electric shock, and personal injury, please follow these instructions:

- If the unit has been dropped or damaged, do not operate the unit. Do not use this product if the power cord or plug is damaged. To avoid the risk of electric shock, do not attempt to repair or replace parts yourself. Only use original replacement parts. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified personnel to avoid danger.
- For further instructions on replacement and repair, please contact the consumer service department at support@breezome.com.
- Your device may be equipped with a detachable power supply or power cord or plug with a fuse or other safety features. Only use the provided power cord and plug.
- Before plugging the power cord into a power outlet, ensure that all the electrical outlet rating labels, including voltage, are compatible with your power supply.
- Never use the power cord as a handle or otherwise bend, stretch, or pull the power cord.
- When inserting the product, do not insert or allow foreign objects to enter any input or output openings, as this may cause electric shock or fire risk, or damage the product.
Loose connections between the wall outlet (receptacle) and the plug may cause overheating and plug deformation. Stop using the product in this outlet. Contact a qualified electrician to replace loose or worn outlets.
- Before filling with water, moving, repositioning, servicing, cleaning, and when not in use, turn off the power using the product controls, then unplug the power cord. To disconnect the power cord, hold and pull the plug, not the cord.
- Turn off and unplug the power if the product is left unattended for an extended period or during a power storm.
- Electric shock occurs when liquid comes into contact with electricity. Be careful when removing and reinstalling the water tank to avoid electric shock. Do not pour water through the top outlet air grille of the power head.
- Be aware that high humidity levels can promote the growth of biological organisms in the environment.
- Unplug the device during filling and cleaning.
- Never leave water in the reservoir when the device is not in use.
- Empty and clean the humidifier before storing it. The humidifier should be cleaned before the next use.

- a) Information regarding the risks of fire, electric shock, or injury to persons that could exist due to use of the product. The instructions shall caution the user to place the product and connected cord so that the product is not likely to be upset.
- b) Information regarding the potential risk of electric shock due to overfilling or cleaning the product and removal of the heating element portion of the product without disconnecting the power-supply cord.
- c) Instructions regarding cleaning the product including any need for disassembly (and reassembly) and any need for the use of additives.

Maintenance Warning

To reduce the risk of fire, electric shock, and personal injury, please follow these guidelines:


- **Warning:** After handling the wick (filter), wash your hands to avoid contact with your eyes.
- Regularly clean the product according to the instructions in this manual. Before cleaning, turn off the product and unplug it. Do not use gasoline, thinners, solvents, or other chemicals for cleaning. Please refer to the provided cleaning and maintenance instructions.
- Do not open the appliance casing when the product is plugged in. To avoid the risk of shock, all service and/or repairs must be performed by an authorized service center.
- Empty the water tank immediately after use to prevent the growth of mold, mildew, and other microorganisms. If water remains in the tank for more than 8 hours, thoroughly clean and disinfect the device as described in the “CLEANING AND MAINTENANCE” section.

Disposal Warning

To reduce waste and environmental impact, follow these guidelines:

- The packaging protects the equipment from cross-port damage. The chosen packaging materials are environmentally friendly and can be recycled. Dispose of all packaging materials in an environmentally responsible manner.

POLARIZED PLUG

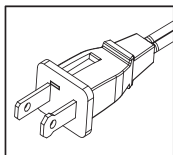

The appliance has a polarized plug(one blade is wider than the other).To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Before Using the Humidifier

Before use, check the device for visible damage. If damaged, do not use it. A visual inspection may not reveal subtle cracks. Fill the water tank and check for leaks.

- Please install the product correctly according to the manual; otherwise, it may cause electric shock, fire, and personal injury.
- If the power cord is damaged, it must be replaced by the manufacturer, a service agent, or similarly qualified personnel to avoid danger.
- If the product does not match, stop using the unit and contact the dealer. Do not plug in the humidifier if the installation is not complete.
- After receiving the humidifier, let it sit for 30 minutes before use to prevent water tank damage caused by sudden changes.
- Insert the parts into the appropriate sockets. Do not put metal products, chemicals, or detergents into the washing tank.
- Do not add water to the mist outlet or air outlet.

Using the Humidifier

- Turn off, unplug, and empty water when moving the machine.
- Make sure to place the machine at least 2 meters away from wooden furniture or other appliances.
- Do not allow water to flow into the bottom through the exhaust port to avoid damage.
- When in use, place the device on a smooth and flat surface. Do not tilt the humidifier.
- Keep hair, fabric, etc., away from the machine to avoid blocking the air inlet and outlet. When using with household gas appliances (gas stoves, gas water heaters, etc.), ensure ventilation.
- Do not exceed the maximum water level when adding water.
- Use within a room temperature range of 5°C–40°C.
- Leakage may occur during cleaning, moving, or filling the water tank. Be careful to avoid leakage when performing these activities.
- Place the humidifier so that it does not blow directly onto objects or plants.
- Plug the power cord into a standard grounded wall outlet.

After Using the Humidifier

- Do not pull on the power cord.
- Do not clean the device when it is connected to the power supply.
- Do not disassemble the device yourself.
- Keep the machine away from high temperatures and direct sunlight.
- If the room temperature is below 0°C, please empty the water tank and water tray.
- Keep the bottom dry during cleaning.

SPECIFICATIONS


US

Model: 226473TR	Rated Voltage: 120V~
Rated Power: 300W	Rated Frequency: 60Hz

KNOWING YOUR HUMIDIFIER

US

Product Diagram

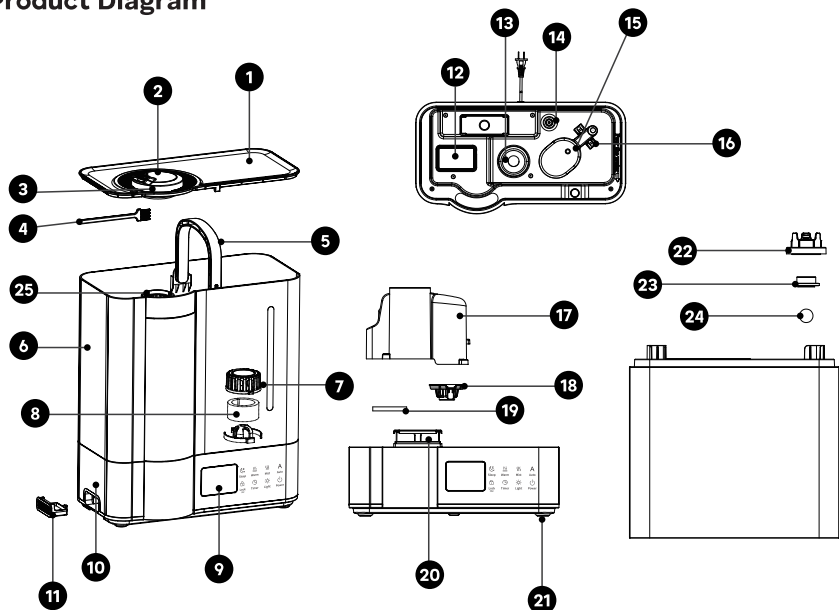

- | | | |
|-------------------------|-------------------------|-----------------------|
| 1 Water tank lid | 2 Small mist nozzle | 3 Large mist nozzle |
| 4 Cleaning brush | 5 Handle | 6 Water tank |
| 7 Filter cover | 8 Filter sponge | 9 LED display |
| 10 Base | 11 Essential oil tray | 12 Heating element |
| 13 Atomizer | 14 Float | 15 Float board |
| 16 Float board bracket | 17 Mist Channel | 18 Water shield |
| 19 Scale wool felt | 20 Air outlet | 21 Foot pad |
| 22 Drain valve assembly | 23 Drain valve silicone | 24 Sealing steel ball |
| 25 Mist Tube | | |

Tips:DO NOT add water into the mist outlet or air outlet.



Mist Level indicators (Blue)



Warm Mist Indicators (Red)



On/Off Button

- Press to turn the humidifier on/off.
- Power off : The entire machine enters standby mode, and the screen turns off.
- **Note:** Child lock function and timer function are available in standby mode.

Timer Button

- Press to activate the timer function.
- Press and hold to continuously adjust the timer. (Refer to the operating logic.)

Auto Mode Button

- Press to activate the constant humidity function.
- The automatic constant humidity feature allows you to set a target humidity level for the environment. Once the specified humidity is reached, the humidification will stop. (Refer to the operating logic.)



Child Lock Button

- Long press for 3 seconds to lock.
- Long press for 3 seconds to unlock.



Ambient Light Button

- By default, the light operates in automatic mode. It turns blue when the humidifier is working on cool mist mode, and turns orange when it is in warm mist mode.
- Press to turn off the indicator light.
- Long press to activate the seven-color RGB gradient light mode



Sleep Button

- Press to enter sleep mode. The machine will turn off lights and operate at low mist. **Note:** Only cool mist is available, heat function is not an option.



Cool Mist Button

- Activates the cool mist humidification function, with 3 levels available.




Heating Button

- Activates the heating function, with 3 levels available.


Installation

1.Before Use

- When using the machine for the first time, remove the foam wrapped around the float in the water tank of the machine.

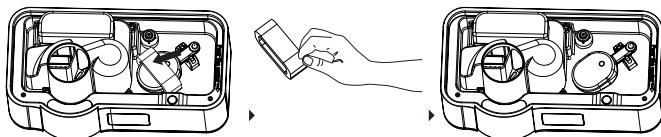


When using the machine for the first time, take the insulation cotton from the instruction manual bag and place it into the heating water tank of the machine.

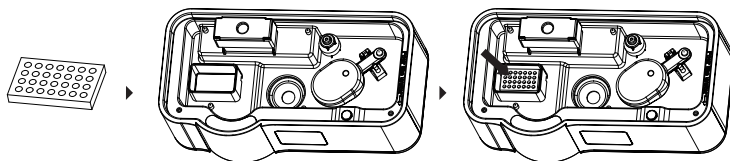



2. Mist outlet component

- The mist nozzle assembly is preinstalled on the water tank cover and can be installed or removed by "pulling to loosen and pressing to tighten." Please install the mist nozzle assembly before use.
- The mist nozzle assembly is one of the important components. Please install it as shown in the diagram below.
- The mist nozzle assembly needs to be cleaned every two weeks. After disassembling, clean the large mist nozzle, small mist nozzle, and water tank cover with water, then install them according to the instructions.

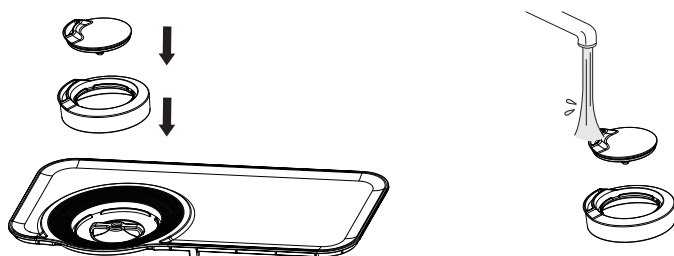



3. Filter component

- The filter assembly is preinstalled inside the water tank. To install or remove it, turn left to loosen and right to tighten. Please ensure the filter assembly is installed before adding water.
- The filter assembly is one of the important components. Please install it correctly as shown in the figure below.
- The filter assembly needs to be cleaned once a week. Please disassemble it, clean it with water, and then reinstall it according to the instructions.

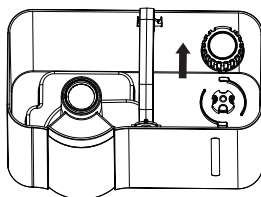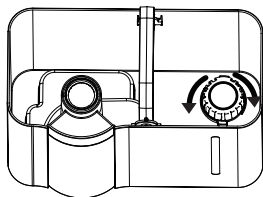



4.Drain valve component

- The drain valve assembly is preinstalled at the bottom of the water tank. To install or remove, turn left to loosen and right to tighten. Please ensure the drain valve assembly is properly installed before adding water.
- The drain valve assembly is one of the important components. Please install it correctly as shown in the figure below.
- The drain valve assembly needs to be cleaned every two weeks. After disassembling, clean the sealing ring and stainless steel ball with water, then reinstall according to the instructions.

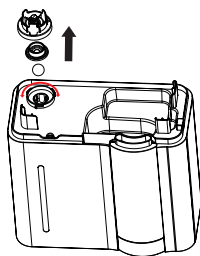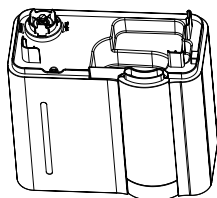

5.Air duct component

- The air duct assembly is preinstalled on the main unit. To install or remove it, pull it out gently and press it back in firmly. Please ensure the air duct assembly is installed before use.
- The air duct assembly is one of the important components. Please install it correctly as shown in the diagram below.
- The air duct assembly needs to be cleaned every two weeks. After disassembly, wash the air duct and the water baffle with water, then reinstall them according to the instructions.

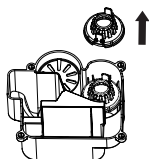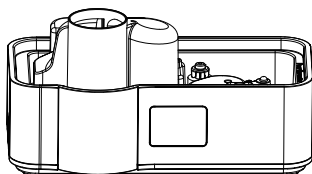


6.Aroma box component

- Press the essential oil cover plate.
- Add essential oil to the indicated position.

NOTES:

- Only use the droppers come with the essential oils, do not pour in directly.
- Add 2-3 drops of essential oils each time,being careful not to overflow.
- Avoid adding essential oil directly to the water, otherwise it may damage the product and caused water leakage.

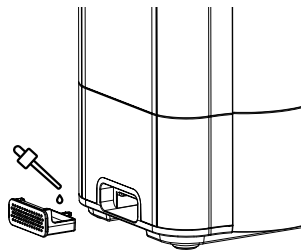

Using your smart Humidifier

1. After plugging in, the screen lights up instantly, accompanied by a single beep from the buzzer,after 3 seconds the humidifier enter the “stand-by” mode. The screen turns off.
2. Press  to turn your humidifier on/off.
3. Press  repeatedly to cycle through mist settings: Low, Medium, and High.
Low Mist

 Low Mist

 Medium Mist

 High Mist

4. Press  to turn on warm mist, Keep pressing to increase the heat setting of the mist, and to turn warm mist off.

 Heat Off

 Low Heat

 Medium Heat

 High Heat

5. Press  to activate the automatic humidity function.
 - You can set the desired ambient humidity. Once the target humidity is reached, humidification will automatically stop.
 - Press  to adjust humidity in increments of 5%. Current humidity is 40%, with a maximum adjustable humidity of 80%. After reaching the maximum value of 80%, pressing again will cycle back, starting from 40%. After selecting the desired humidity level, it will be successfully set after 3 seconds of inactivity.
 will light on.After successful setting, the machine will operate at the current

- setting level. It will stop humidifying when reaching the specified humidity, and the screen will continuously display the current environmental humidity.
- The heat mist setting is adjustable. You can turn it off.
6. Press  to activate the timer function.
 - Press to adjust the time in 1-hour increments, cycling through 1 to 24 hours. After 3 seconds of inactivity, the time setting will be successful.
 - Press and hold to continuously adjust the timer.
 - In standby mode, selecting the timer allows you to set the power-on time; in power-on mode, selecting the timer allows you to set the power-off time.
 7. Press  to activate the Child lock function.
 - Long press press to lock the machine's operation, preventing accidental touches by children. While locked, long press for 3 seconds to unlock.
 8. Press  to activate the ambient light function.
 - Automatic Mode: The light turns blue when only the cool mist is on, and turns orange when the warm mist is on.
 - Press to deactivate the automatic mode indicator light.
 - Long press to activate the seven-color RGB gradient light.
 9. Press  to activate the sleep function.
 - Sleep mode sets the humidifier's mist level to low and turns off the display light. The sleep icon will turn off after 5 seconds, making it ideal for sleeping. Sleep mode can only be used in cool mist mode.
 - Press any key except the main key to wake up the display screen. Click again to use the machine normally. If there is no operation for 3 seconds, it will enter sleep mode again, with the sleep icon half-lit. After 5 seconds, the sleep icon will turn off.
 - In sleep mode, the ambient light is off by default. You can choose to turn on the ambient light. Upon the first press of the ambient light button, the display screen wakes up and lights up. Press the ambient light button again within 5 seconds to turn on the ambient light normally, and the '88' display screen turns off, returning to sleep mode. Repeat this operation to turn off. (**Note:** Single click to activate automatic mode light, long press to activate colorful gradient ambient light).
 - **Note:** Sleep Mode automatically turn off warm mist to reduce noise levels.
 10. Water Shortage Alarm
 - When the humidifier runs out of water, it automatically stops operation with three continuous buzzer sounds, and the ambient light remains red to indicate the water shortage alarm.
 - When resuming operation after refilling water, the machine will continue functioning with the settings that were in place before.
 11. Memory Feature
 - The humidifier will record the humidity and mode setting in the last time when it was turned off with power source keeping connected. It runs as the recorded setting when turns on next time.
 - After unplugged, Memory setting can be reset and back to default setting.
 - ***Note: Child lock, timer does not have memory**

12. In standby mode

- After plugging in, the humidifier is currently in standby mode.
- Child lock function available, preventing accidental touch by children and pets, ensuring safety.
- Timer function enabled. Press the timer button to set the time, and after 3 seconds, the setting will be successful. 'h' will light on. The machine will start at the scheduled time. (**Note:** Before the set time, pressing the power button directly activates the machine.)

CLEANING AND MAINTENANCE


US

- **Warning:** Before servicing or replacement of any component of a product requires the removal or disconnection of any protective device, the product such device shall be replaced in its proper position.
 - When servicing or replacement of any component of a product requires the removal or disconnection of any protective device thermal link, such device shall be replaced in its proper position.
 - To ensure air quality and humidification performance, proper cleaning and maintenance of your ultrasonic humidifier are essential. The frequency of cleaning the humidifier varies depending on usage, water hardness, and environmental factors.
 - Generally, it is recommended to thoroughly clean the humidifier a few times throughout the season or whenever algae, mineral deposits, or other particles begin to form. It is recommended to clean the water tank and body reservoir every 3 days.
- ★ Before cleaning, turn off the humidifier and unplug it. Remove the water tank, empty any remaining water from the tank and body reservoir, and wipe with a soft cloth. The surface of the humidifier and water tank can be wiped with a clean, soft, damp cloth (use the provided brush to clean hard-to-reach areas). Keep the device dry. Reassemble the humidifier:
- It is recommended to clean before storage.
 - Unplug the power cord and tie up loose power cords.
 - Allow the humidifier to completely dry before storage, and do not leave water in the container.
 - Cover with a lid, or place back in the retail box, to prevent the humidifier from accumulating dust over time. Store the humidifier in a cool, dry place.


- ★Note: When your humidifier is in operation, pay attention to the following:
- If you run the humidifier continuously, you may need to refill it with water daily. Check the water tank regularly to ensure an adequate water supply for operation.
 - Ensure optimal airflow by keeping the air outlet clear. Make sure curtains and other items are kept sufficiently away from the humidifier to avoid blocking the air intake or disrupting airflow.
 - Do not add any additives such as essential oils or perfumes to the water tank. These additives can cause cracks in the silicone sealing ring and may affect its performance.

Cleaning the Ultrasonic Nebulizer

- Before cleaning the product, users must be described as follows including any need for disassembly (and reassembly) and any need for the use of additives.
- To reduce the risks of fire, electric shock, or injury to persons that could exist due to use of the product, the source of electrical supply shall be disconnected prior to beginning any such service or cleaning operation.
- **Warning:** place the product and its connected cord in a way that reduces the likelihood of tipping over.
- To reduce the risk of electric shock, avoid overfilling or cleaning the product, and do not remove the heating element without disconnecting the power-supply cord.
- **a.** Rinse the tank, remove the dirt inside it with a lint-free cloth. (If there is a significant amount of limescale, it's better soak it in vinegar for about 10 mins).
- **b.** To prevent malfunctions caused by clogging of the water tank, rotate counter clockwise to remove the filter cover (at the bottom of the water tank), take out the filter sponge, rinse them both thoroughly and remove any scale.

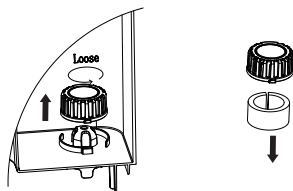


- **c.** Remove the mist nozzles on the water tank lid and clean both the large and small mist nozzles with clean water.
- **d.** Put the tank upside down. Turn the knob counter clockwise to remove the drain valve, and clean the sealing ring and stainless steel ball.

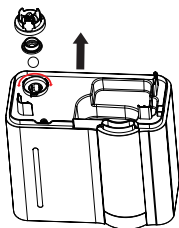


e. Remove the noise silencer, then add a small amount of vinegar to the base, soak for 10 minutes, then wipe out the limescale/dirt with a soft cloth, then fill the base with water, follow the instructions at the bottom to pour out the water, and repeat 2 to 3 times. Do not rinse it directly under faucet.

Not to do: Be careful not to spill water into the air outlet on the base to prevent any damage to the machine.

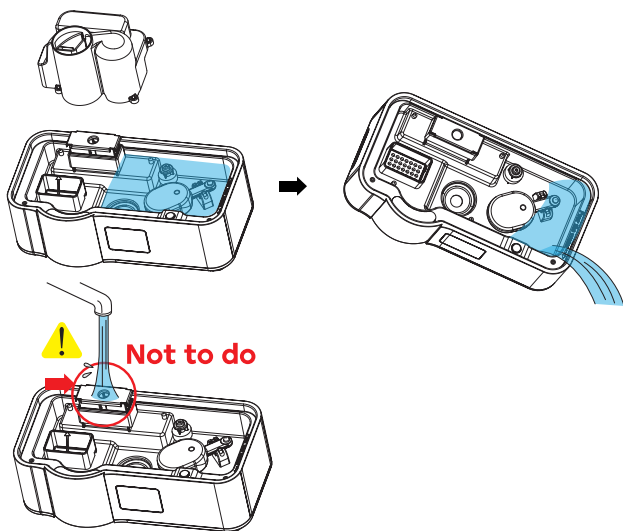

f. Remove the absorption pad from the top of the heating element. Clean the pads under warm, running water (Warning: Operate only after the machine has cooled down to avoid burns from high temperatures.)

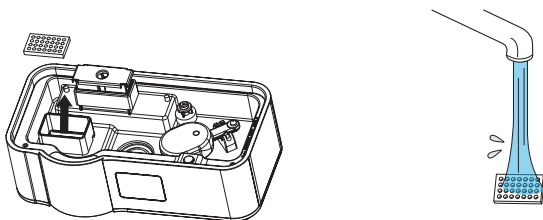

problem	possible cause	solution
Stop working after a period of use and the red light flashes.	The filter(located at the bottom of the water tank)hasn't been cleaned for a long time,causing limescale to clog the filter.	Take out the filter lid and try to turn on the machine again. Tips: Please clean the filter at least once a week. Rinse it under faucet or soak it in vinegar, try to wipe away the limescale on it.
No mist come out from the top.	The water tank and the base are not aligned.	Ensure the water tank and the base are properly aligned.
Water is leaking from the machine.	Adding essential oils directly to water leads to product damage and water leakage.	Please add essential oil to the essential oil tray. Contact us if leakage is severe.
	The sponge hasn't been removed,or something is stuck in the float inside the base.	Remove the sponge or something else that stuck in the float.
	Dirt is stuck in the drain valve of the water tank.	Refer to cleaning guide. Clean the dirt around the drain valve to ensure the valve can close properly.
	Accidentally pour water into the mist outlet when adding water.	Avoid adding water into the mist outlet.
	Tried above ways and leakage problem still cannot solve.	Contact us for a resend or refund.
Leaves white residue or white dust.	The white residue comes from minerals in the water.	Use distilled water or purchase additional demineralization cartridge for humidifier.
Unit fails to power on.	Unit is not plugged in.	Plug power cord into electrical outlet.
	Household circuit breaker/ ground fault circuit interrupter has tripped or blown fuse.	Reset circuit breaker/ground fault circuit interrupter or replace fuse.
	Unit is damaged or in need of repair.	Contact our customer service for replacement.
	Cease usage and unplug.	Ensure power head is securely inplace for proper power connection. Contact Customer Service for assistance.
Unit makes bubbling or gurgling sound.	This is normal , water is being dispensed into base.	

problem	possible cause	solution
There is no air humidification	Water level in tank is empty or too low.	Refill with clean, cool water. See HOW TO USE for instructions.
	Air flow is blocked.	Remove obstruction.
	The water tank and the base are not aligned.	Ensure the water tank and the base are properly aligned.
The water tank has some white sediment.	The dirt generated from improper water usage or the sediment formed after water has been left standing for a long time.	Pour out the water when not in use for extended periods, and use distilled water correctly to minimize the build up of impurities.
The fog produces an unpleasant smell.	Long time without changing water.	Regularly change the water.
	The device has not been cleaned for a long time.	Clean this device, then place it in a cool, shaded area to air dry for 12 hours with the lid removed.
Any other problem.	Any reason	Contact our excellent support:

Thanks for choosing TRUE 42 HUMIDIFIER.

This product is covered with TRUE 42 product and labor warranty for 12 months from the date of its original purchase.

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel,
- Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts,
- Use enforce, damage caused by external influences,
- Damage caused by non-observance of the User Manual,e.g. connection to an unsuitable mains supply or non-compliance with the instructions,
- Partially or completely demanded appliances,
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by TRUE 42.

We can only provide after sales service for products that are sold by TRUE 42 or TRUE 42 authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

Please have your invoice and order ID ready before contacting Customer Support.

